


Tabla de Contenido

How to clean external filters (HT90)	3
Paso 1 - Introduction	4
Paso 2 - Printer preparing	4
Paso 3 - Lower filters cleaning	5
Paso 4 - Upper filters cleaning	5
Paso 5 - Well done!	6

How to clean external filters (HT90)

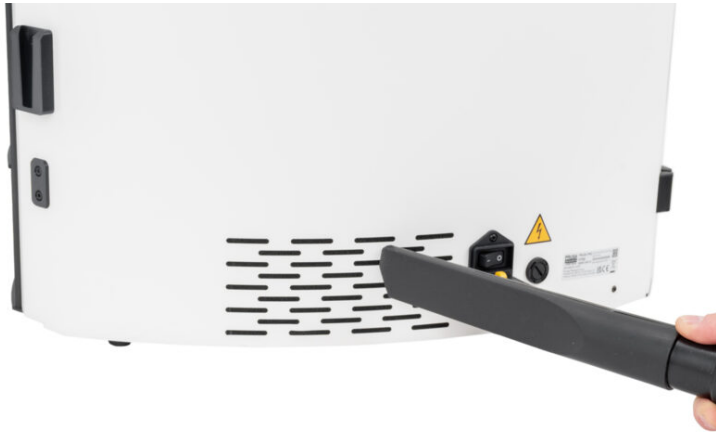


help.prusa3d.com/g887232

Escanea el código
QR para ver la última
versión de este
capítulo.




PASO 1 Introduction

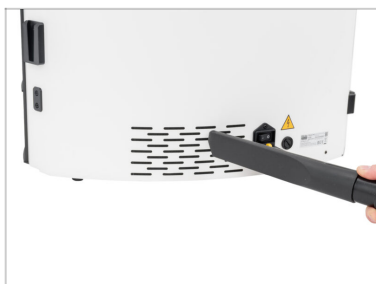

◆ This guide will take you through the cleaning of the external filters on the **HT90**.

ⓘ *The recommended cleaning interval for the external filters is every 600 printing hours. However, the printer itself will notify you of maintenance via firmware.*

PASO 2 Printer preparing

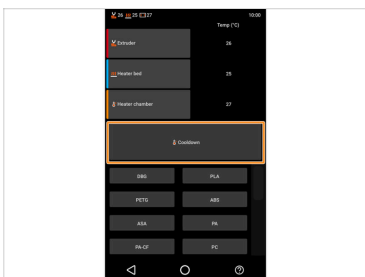


◆ Enfría la impresora. Ve a *More > Temperature > Cooldown*. Espera a que la impresora se enfríe.

⚠ **Asegúrate de que la base calefactable se ha enfriado hasta la temperatura ambiente.**


◆ Apaga el interruptor (símbolo "O").

PASO 3 Lower filters cleaning

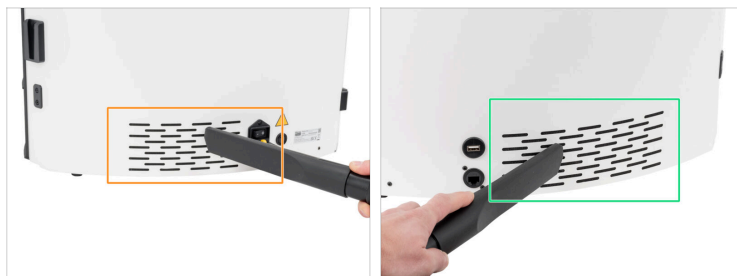

- Vacuum the dust from the **bottom right** grille with your vacuum cleaner with an attachment.
- Vacuum the dust from the **bottom left** grille with your vacuum cleaner with an attachment.

PASO 4 Upper filters cleaning

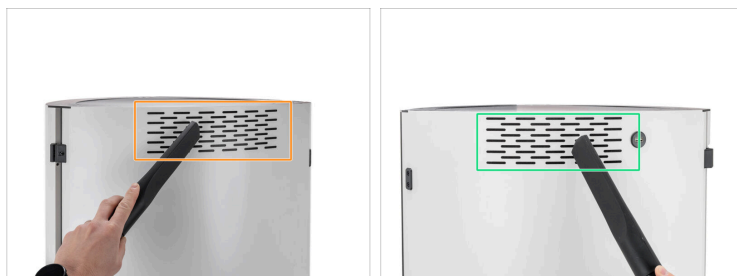

- Vacuum the dust from the **upper left** grille with your vacuum cleaner with an attachment.
- Vacuum the dust from the **upper right** grille with your vacuum cleaner with an attachment.

PASO 5 Well done!



- ◆ Good job! The filters are clean. Happy printing!
