

# Tabla de Contenido

<b>Unpacking the printer (HT90)</b> .....	3
Paso 1 - Opening the Prusa Pro HT90 box .....	4
Paso 2 - Damage indicator .....	5
Paso 3 - Removing the wooden pallet .....	6
Paso 4 - Removing the transport handles .....	7
Paso 5 - Removing the top & inserts .....	8
Paso 6 - Moving the printer .....	9
Paso 7 - Removing the transport belts .....	10
Paso 8 - Opening the lid .....	11
Paso 9 - Removing the belt clips .....	11
Paso 10 - Moving the print head .....	12
Paso 11 - Removing the transport foams .....	13
Paso 12 - Spool holder installing .....	13
Paso 13 - ENCIENDE la impresora .....	14
Paso 14 - Firmware update .....	15



# Unpacking the printer (HT90)



[help.prusa3d.com/g724944](https://help.prusa3d.com/g724944)

Escanea el código  
QR para ver la última  
versión de este  
capítulo.



## PASO 1 Opening the Prusa Pro HT90 box



**i** This guide will take you through the unpacking the Prusa Pro HT90 from the original package.

**!** **CAUTION: Proceed very carefully as the printer is heavy and large.**

**!** **At least two people are required for unpacking.**

**◆** Bring a pair of scissors to cut the shipping straps.

**i** Please retain the original packaging for the printer. It may be needed for returns or future transportation.


### PASO 2 Damage indicator



⚠ First of all, check the damage indicator on the box, if:

- 🟢 OK > If the **indicator is white**, proceed to the next step.
- 🟠 NOK > If the **indicator is red**, please contact our 24/7 support team at the bottom right of your screen.

## PASO 3 Removing the wooden pallet

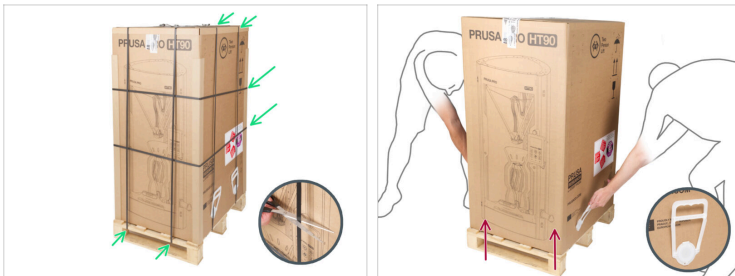

- Using scissors, cut and remove all black transport straps.
- With the help of another person, grasp the white handles and remove the printer package from the shipping pallet.
- ⚠ **CAUTION:** Be **EXTRA CAREFUL** as the printer packaging is heavy and bulky.
- Place the box on a stable surface. **Make sure the package is oriented top side up.** See the transport handles on the underside.

## PASO 4 Removing the transport handles



- ◆ Locate the four white handles on the bottom of the box.
  - ◆ Open the handle and remove it from the box.
  - ◆ Open and remove the remaining handles from the box.
  - ◆ Slowly slide up the main part of the box. And remove it.
- i** Be aware that a vacuum may build up inside, making upward movement difficult. Slide it up very carefully and slowly.

## PASO 5 Removing the top & inserts



- Remove the protective film by pulling from top to bottom.
- Retira la carta de bienvenida.
- Remove the box on the side that contains the accessories. **Do not throw them away!**
- Remove the top black fixation from the top of the printer.

## PASO 6 Moving the printer




**Two persons are required to lift the printer.**




**CAUTION: Proceed very carefully as the printer is heavy and large.**

- ◆ First person - pick up the two purple transport belts on the front of the printer.
- ◆ Second person - pick up the purple transport belt on the back of the printer.
- ◆ Pull the transport belts together and carefully lift the printer and remove it from the bottom fixation.
- ◆ Place the printer on the flat and stable surface.

## PASO 7 Removing the transport belts

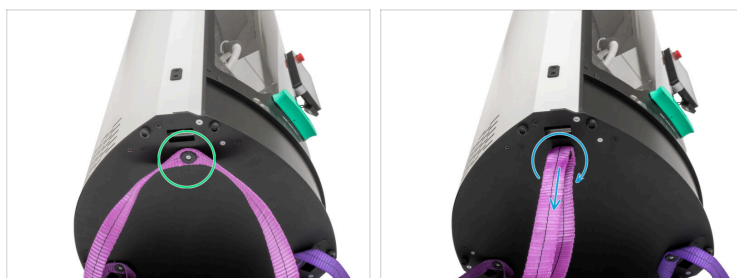


 **Two persons are required to remove the transport belts from the printer.**

- **Carefully tilt the printer** to one of its sides to gain access to the belts.
- From underneath, locate the pin that secures the purple transport belt to the printer.
- Turn the pin 90° to unlock and remove the purple transport belt from the bottom of the printer.
- Repeat this process for the last two transport belts.
- After removing all the transport belts, place the printer back on its “feet”.

---

## PASO 8 Opening the lid

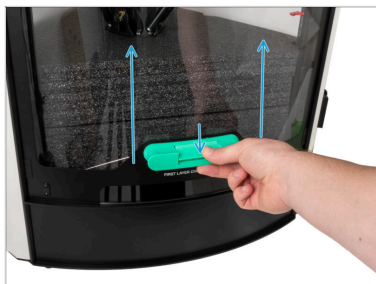

- Desde la parte frontal de la impresora:
- Press the safety latch on the door lid and slide the door all the way up.

---

## PASO 9 Removing the belt clips



- Locate three red belt clips securing the belts.
- Grasp the first securing clip on the left belt and pull it out.
- Repeat the process for the remaining two safety clips.


## PASO 10 Moving the print head






- ◆ Move the print head up from the transport fixations according to the following instructions:
  - ◆ Place your point fingers between the transport fixation and the print head frame. **Don't pinch any cables!**
  - ◆ Gently pull the print head all the way up.
  - ⓘ If any guide arm falls out of the magnet, simply snap it back onto the corresponding free ball magnet.

## PASO 11 Removing the transport foams







 You may have an additional accessory between the transport foams, so be careful when removing it.

-  Remove the upper transport foam.
-  If you have an additional accessory between the transport foams, remove it and place it nearby.
-  Remove the lower transport foam.

## PASO 12 Spool holder installing




-  Look for the Spool holder in the Accessories box.
-  See the picture, the spool holder is pushed down with the smaller side.
-  Attach the spool holder and pull it downwards till the upper end is aligned with the holder.
-  The spool holder can hold wider spools, adjust the spool holder by turning it counter-clockwise.

## PASO 13 ENCIENDE la impresora



- Enchufa el cable de la fuente de alimentación desde la parte posterior de la impresora.
- Enciende el interruptor (símbolo "I").
- Good job, the printer is ready for first set-up.

### PASO 14 Firmware update

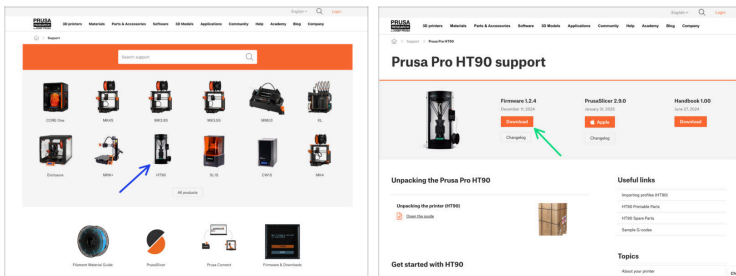

- i Todos los packs de impresoras que se envían incluyen una unidad USB con el firmware más reciente. Sin embargo, se recomienda comprobar y posiblemente actualizar la versión del firmware.
- Visita la página [help.prusa3d.com](http://help.prusa3d.com).
- Navigate to the Prusa HT90 page.
- Guarda el archivo de firmware (*.bbf*) en la memoria USB adjunta.
- i Pro tip: To access Prusa HT90 homepage you can use the URL: [prusa.io/HT90](http://prusa.io/HT90)



---

---

---

---

---

---

---

---

---

---



---

---

---

---

---

---

---

---

---

---

